

# Operating Manual of M80(MSR800,msr900) Magnetic Stripe Reader/Writer

Please read the Operating Manual of the MSR800 Magnetic Stripe Reader/Writer in the beginning of using the machines. So that you can Operate the machine easier.

## 一、Product Picture





## 二、 Specification

- ◆ **Communicate:** Standard USB Cable Sign Level ,9600 BPS By Defaulted, 8-Bit
- ◆ **Dimensions :** 212(L)X64(W)X63(H) mm
- ◆ **Weight:** Approx.:1.35Kg
- ◆ **Power Supply:** External Switching Power 24V/2.2A
- ◆ **Card Standard:** ANSI, ISO, ABA
- ◆ **Recording Density:** 一二三 track Single Direction writing/reading
- ◆ **Data structure:** ' % ' 1 Track Data? ' + ' : 2 Track Data ' ? ' 3 Track Data?
- ◆ **Operating Temperature:** -30 °C ~ 70 °C (Storage) -10 °C ~ 60 °C (Operation)
- ◆ **Relative Humidity:** -10 %~ 90%rh (Storage) -10 %~ 85%rh (Operation)
- ◆ **Durability:** 1,000,000times

## 三、 Package Including

- ◆ 1unit MSR800 Machine
- ◆ 1Unit 24V Power Adapter
- ◆ each Hi-co or Lo-co magnetic card
- ◆ 1 Cleaning Card
- ◆ 1 MSR800 Software

## 四、 Application:


- Bank System
- ID Identification
- Credit card, Membership ID card
- Security Management System

- Tax-Controlled System
- others

## 五、Preparing for using machines

### 1. Windows XP System: Install USB Drivers

Put CD Disk into CO-ROM, Installing USB Drivers, Click "**Driver Installer.exe**" (if System is "Windows vista", Click "Vista Driver Installer.exe", Pop-up Window Displays, then Click "Next" Button .

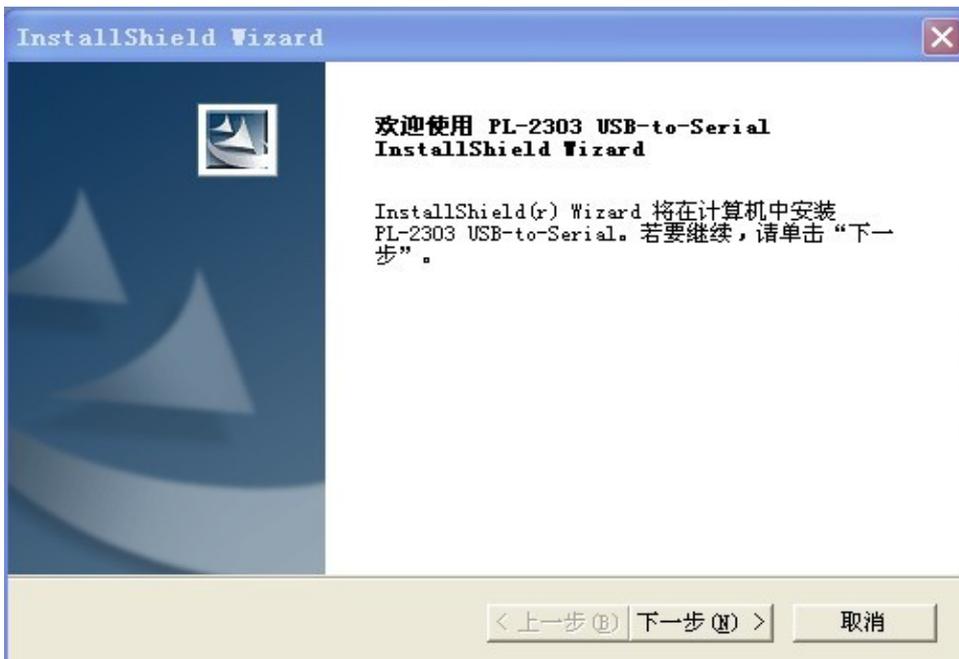


As the above Picture, then Click "Finish". USB finish installed.

### 2. Install Application Software


Put CD Disk into CO-ROM, See as followed Picture, you can Choose "Chinese Version" or "English

## Version” Operating Interface, Copy it to the Desktop

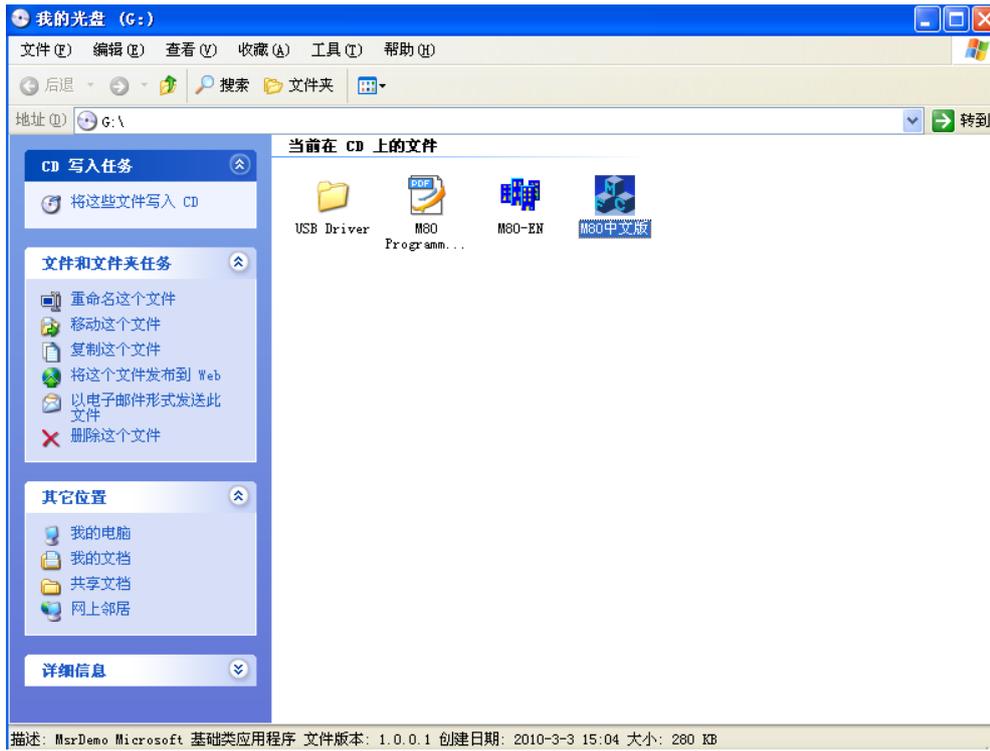

### 七: **Software Operating Manual:**

\*Connect MSR800 with Power Adapter and the Power Supply, then Plug USB port into PC(Computer), final Open MSR800 software interface, Click “ Confirm “, then you can use it easy as follow Picture(Note: if Connect successfully , you will see the Message “ M80 READY “ on the Left Corner)

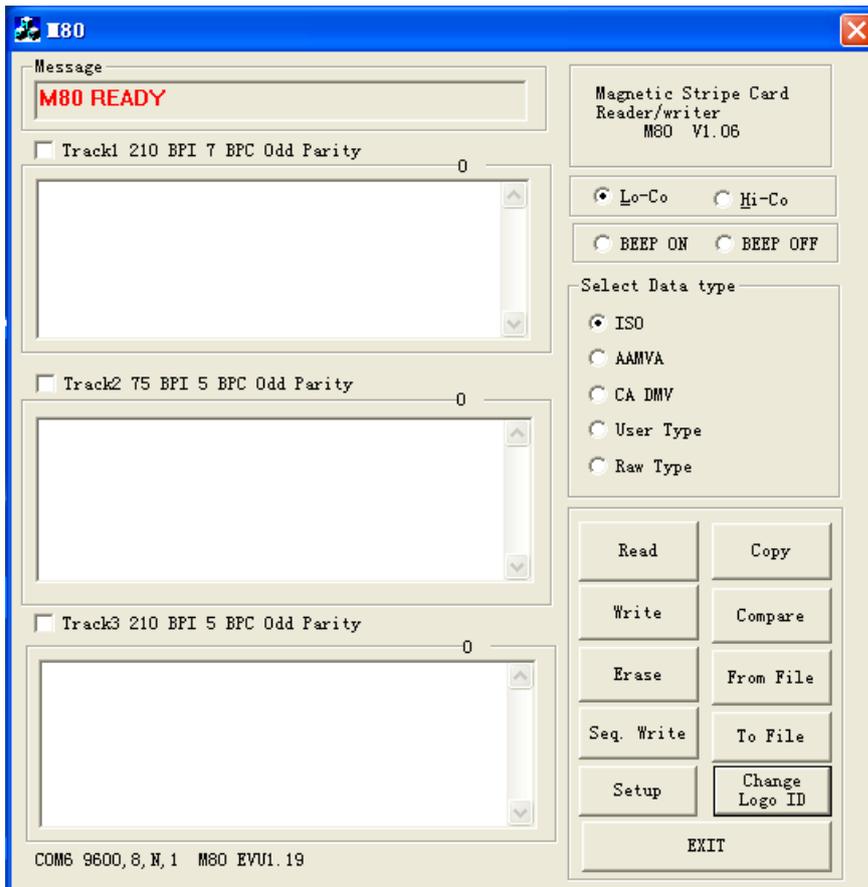

( Note: if the Operating interface showed” no Connetct M80”, Please Pull the Plug and USB, then install them again)

- MSR800 Correct operation way as follow picture

Picture 1




- Swipe cards, make sure the magnetic stripe side of card should be the same as follow picture

Picture 2



1 Lo/Hi-Co magnetic cards

 Open the Software , you will see the ‘Lo/-Co’ or ‘Hi-Co ‘Button, writing the magnetic cards, make sure the ‘Hi-co magnetic card’ should be the chosen ‘Hi-Co’, ‘Lo-Co magnetic cards’ should be chosen”




Hi-Co magnetic cards

Lo-Co magnetic cards




## 2. Open/Close Beep Sound

 This Button can be controlled the Buzzer **Valid or Invalid** , you can choose it according yourself requirement.




## 3. “Read” magnetic cards

 
confirm whether the Magnetic cards have any data into the magnetic cards or not, Please Click”




**Read”** Button, and “Read” indicator light will be lighted , then Swipe the cards, the data of the magnetic cards will be showed on the Followed Dialog Box,

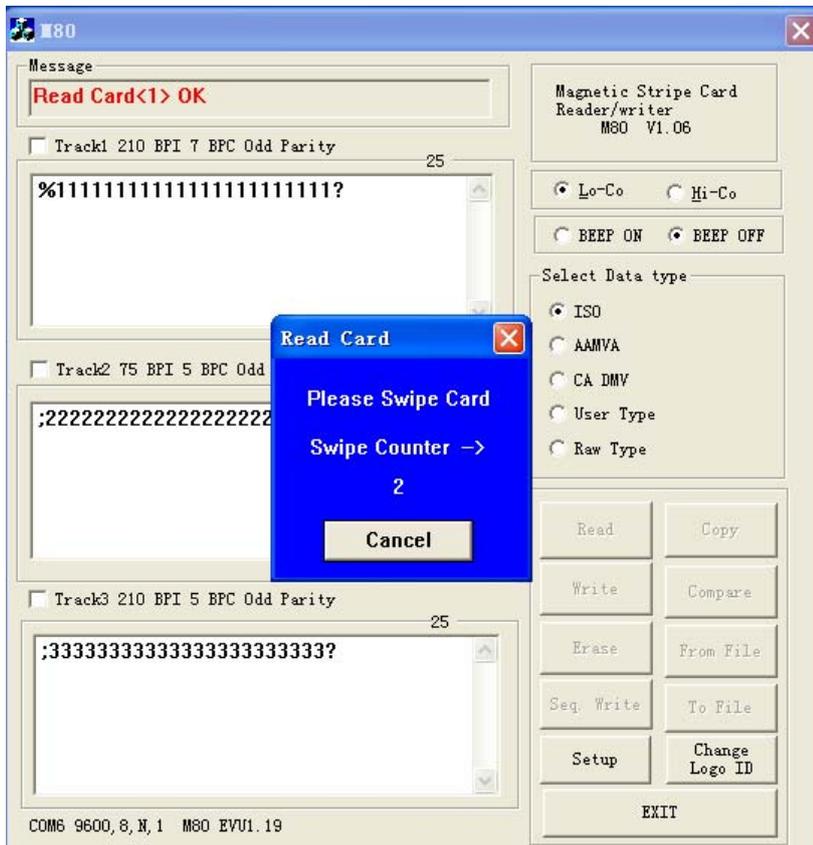




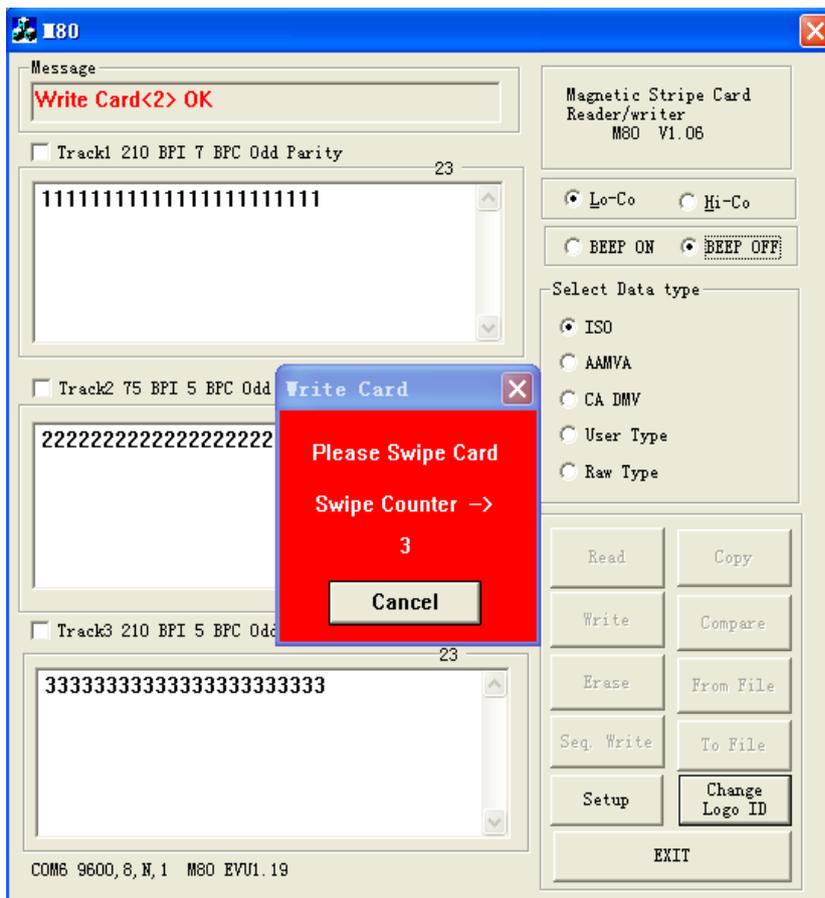


## 6 “Compare” Magnetic Cards

  Comparing both of cards data are in harmony with each other or not, Please Click” ” Button,




then showed ,Swipe the needed compare cards again, if the Message Box showed follow message(the compare cards successfully)

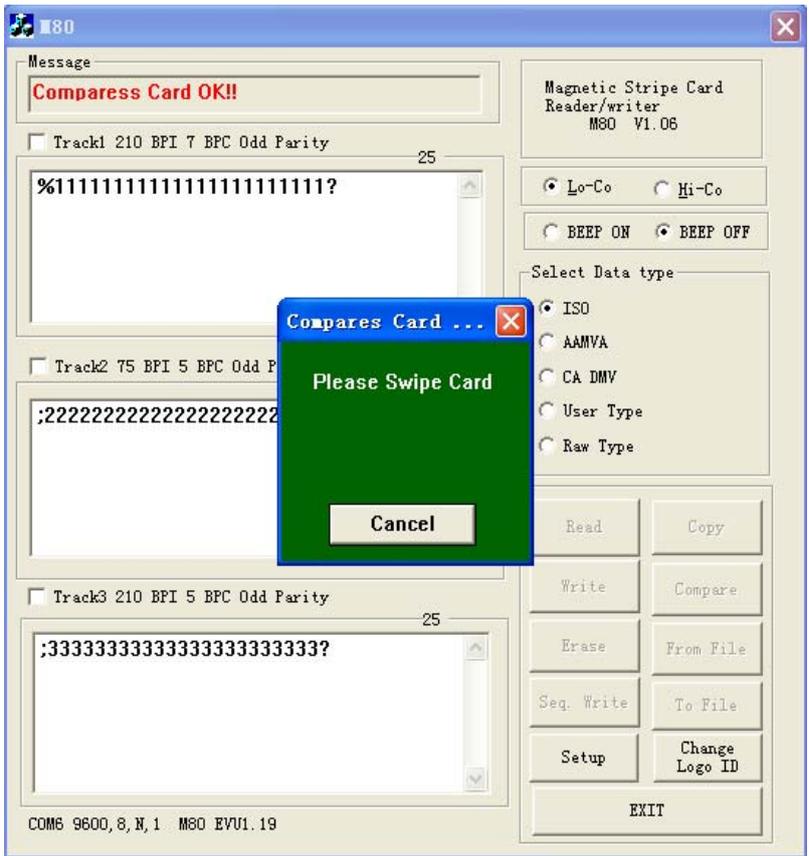

7: "Erase" Magnetic cards

If you don't need any data of the magnetic cards, Please choose "Erase" the data of cards.

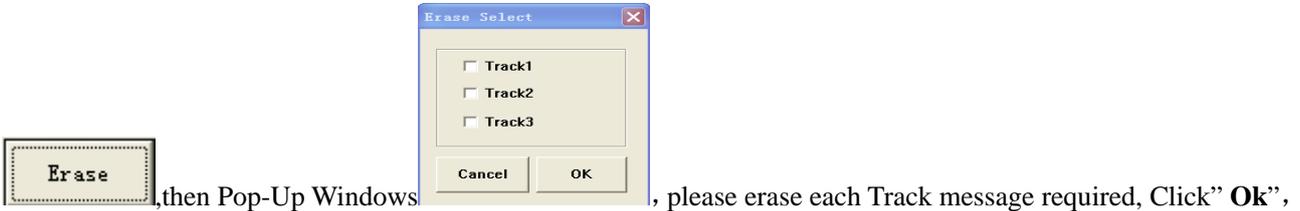


,then Pop-Up Windows

, please erase each Track message required, Click" OK",




if showed the picture, that mean Erase cards successfully

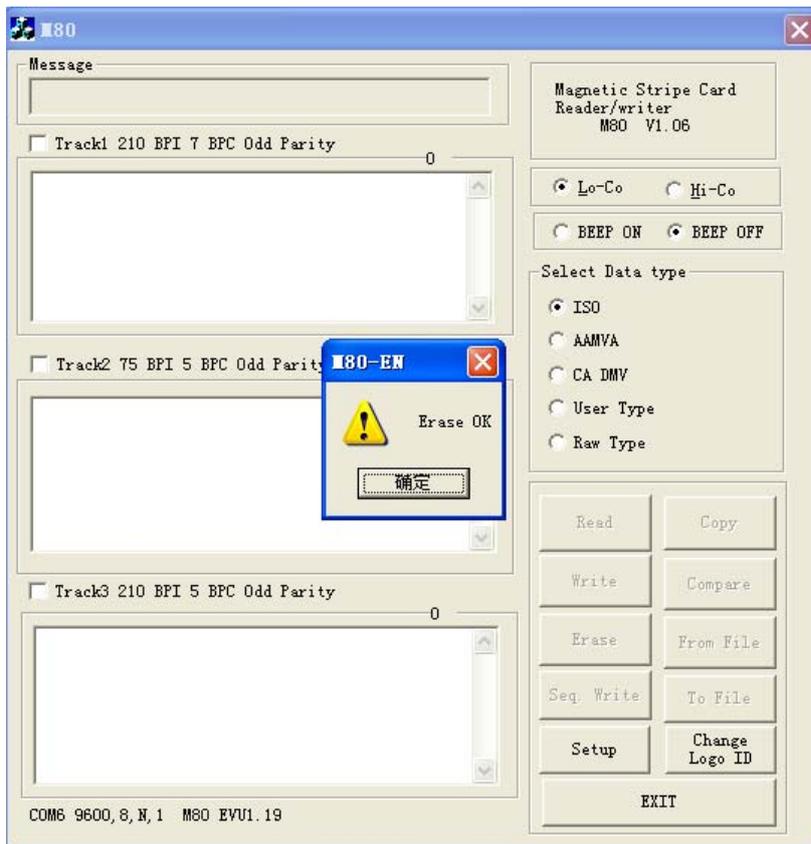

### 8 : “From File” to write card

 If Data doesn't need edited by Yourself. You can get them from the Computer Files(data files),Click”




”, Open the Dialog Box




, Choose the files you needed, then swipe

card later. As followed picture:

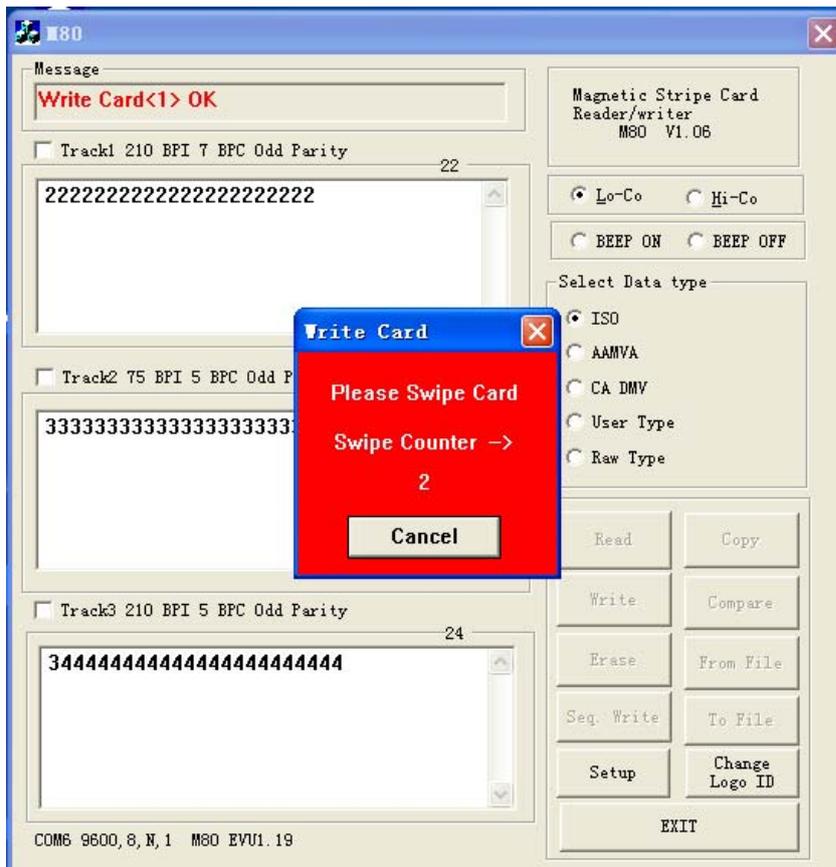


## 9. Sequential write cards

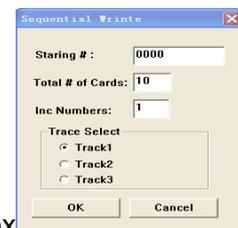

According to your need to Click "Seq. Write", Pop-up the Dialogue Box

Choose the track you need to Sequential write. Then swipe cards .the data will be wrote into the cards Sequential.

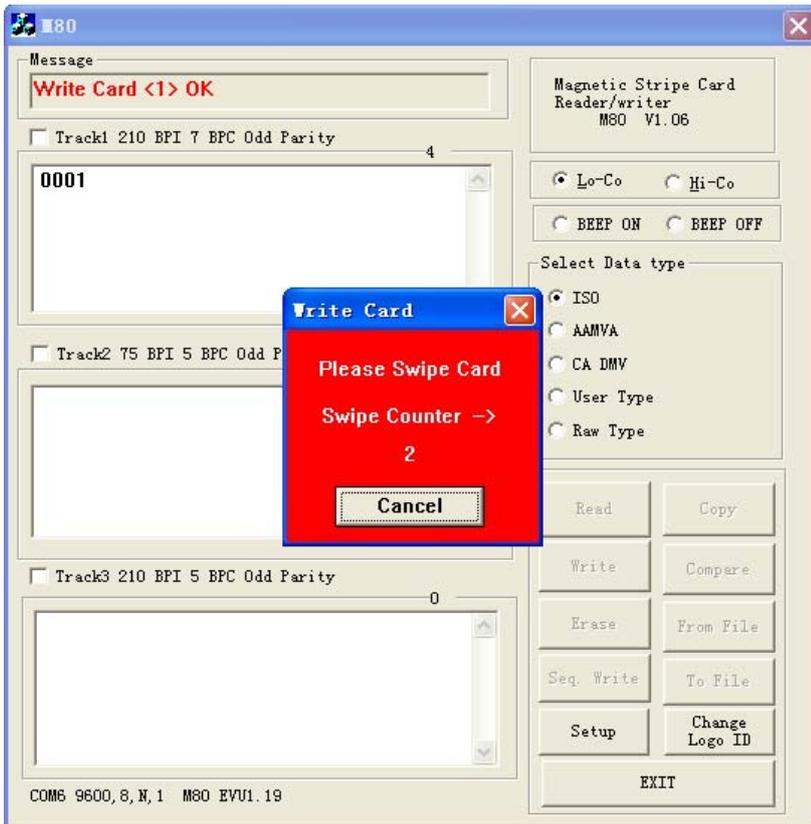


## 10. Read cards save “to files”

Save data to file, Please Click”  ” Button, Pop-Up the Dialogue



box, Double-Click the file(you need to save the file, then swipe cards. The data will be save into the file automatic.

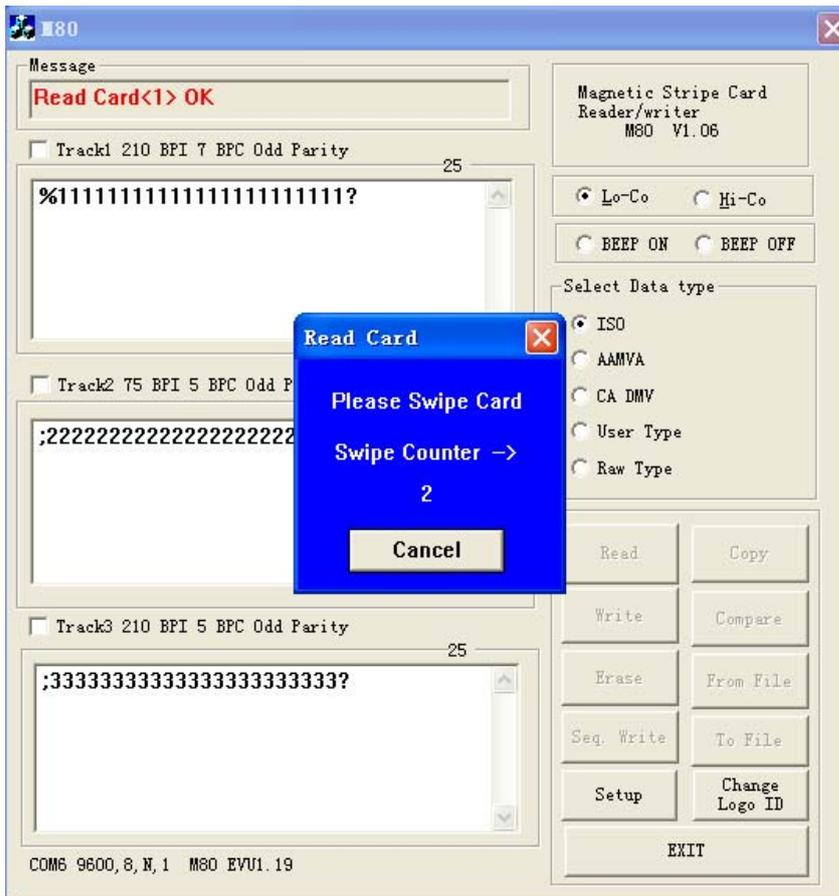

Open the saved file, you will see the data. As follow picture:



## 11. Setting

Setting the relevant parameters according your required

## 12. Change the Log in ID and Password

Change another New Password, it can avoid somebody to change your data, so that you can protect the relevant important information

## 八: Maintenance

The Magnetic Stripe Card Reader/Writer is a advanced high-tech products, Please take care of it carefully, Long-time usage, if come across the followed problems, we can take some measures:

1:Some Magnetic Powder on the surface of the magnetic head ,Read/Write card success rate declines

Use the Cleaning card to clean the magnetic head several times.

2:: Application program can't connected with Magnetic Swipe Reader/Writer

Communication not correct, Check the data cable is broken or not and Confirm the parameters setting; Checking the USB Driver is broken or not, re-install the Driver again. Checking the USB Port whether connect successfully or not; Checking the External Power Supply is normal or not

